

AKAI


INSTRUCTION MANUAL



APRC-20BG

NOTES


Do not share the power socket with multiple appliances.

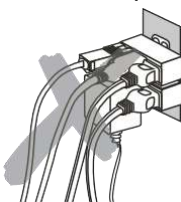

Do not disassemble, attempt repair or re-assemble the appliance on your own.



If you are not using the appliance, pull the power cord out of the mains socket.

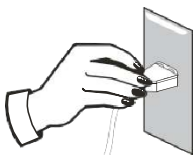

Take care of the power cord and maintain it appropriately. To ensure safety, do not twist the cord or pull the plug from the socket using the cord. Do not compress or stretch the cord.



Do not use the appliance if the supply voltage is lower than 90V or higher than 240V. If the supply voltage is less than 90V, the appliance may not work and it's lifetime may be affected. If the voltage is higher than 240V, the appliance may catch fire, or cause a fire.



Do not wash the appliance or use it in the bathroom, or it may cause potential injuries and other problems.



NOTES

1. This appliance must not be used by persons (including children) with physical or mental impairments or by persons with insufficient experience and knowledge, unless they are under supervision or have been instructed about the operation of the appliance by the person responsible for their safety.
2. Children should be under supervision and should not play with the appliance.
3. Do not immerse the power cord, the plug or the appliance in water or other liquids.

Installation location

Leave sufficient space around the appliance of at least 5cm from any wall/obstacle to ensure proper ventilation and prevent the appliance from overheating. The following places are not suitable installation locations for the appliance:

- an unstable location
- a location near a heat source or in direct sunlight.
- in a wet or dusty environment

Warning

To prevent suffering an electrical shock or another accident, do not operate the appliance in a rainy or humid environment.

Cleaning and maintenance

- Use a soft cloth or cotton dipped in a neutral solution for cleaning the surface of appliances. Do not use the type of cloth that you use for washing dishes or aggressive chemical agents.

Before moving the appliance

- Before moving the appliance to a different location, please take the disc out of the appliance so that the disc and appliance will not be damaged.

Storm

- If the appliance is not working properly during a storm, please disconnect the plug from the power socket and reinsert it after a minute.

Do not drop small items or a liquid into the appliance

- In the event that you find small items or a liquid inside the appliance, you see smoke or smell an odour, immediately disconnect the appliance from the power grid. Send the appliance to an authorised service centre.

Repacking the appliance

- When sending the appliance by a transport company, use the original packaging to prevent its damage during transport

CHARGING INSTRUCTIONS

This unit operates on a built-in Li-ion battery that can be recharged either using from an AC/DC adaptor with a rated output of DC 9V, 2A.

Note: The DC input jack located on back of this unit is mainly designed for charging the built- in Li-ion battery. The unit will still operate normally while charging.

CHARGING THE BATTERY

- 1.) Charge the built-in Li-ion battery a minimum of 6 hours prior to first use.
- 2.) After prolonged use, the battery voltage may discharge and operation might become intermittent when the internal battery charge is very low.



Battery Note and Care

- Do not burn or bury batteries.
- Do not puncture or crush.
- Do not disassemble.
- Recycle Li-ion batteries. Do not dispose of in the trash.
- Use only chargers rated for Li-ion cells. Be sure the charger's voltage and current settings are correct for the battery pack being charged.
- Charge batteries on a fireproof surface away from flammable items or liquids.
- Batteries should NEVER be left unattended while charging. Only adults should charge the batteries.
- Follow the manufacturer's instructions for charging the product.

NOTE: These speakers are not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the speakers further away from the TV or monitor if unnatural color shifts or image distortion occurs.




INTRODUCTION

 
1. REPEAT
2. S.EFFECT
3. PREVIOUS
4. FOLDER
5. SLEEP
6. STAND-BY
7. SOURCE

8. PLAY / PAUSE
9. NEXT
10. SNOOZE / 10+
11. SETUP
12. CLOCK
13. ALARM
14. VOLUME

15. USB
16. SD CARD
17. AUX
18. EARPHONE
19. DISPLAY
20. DC IN
21. BATTERY

14

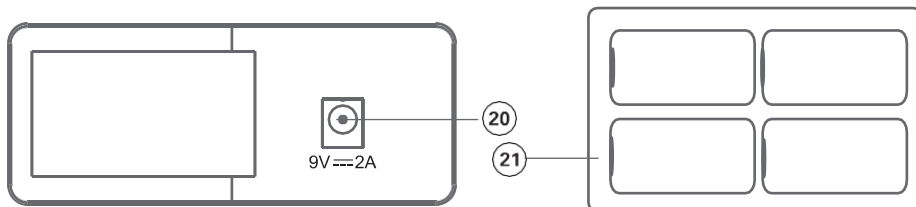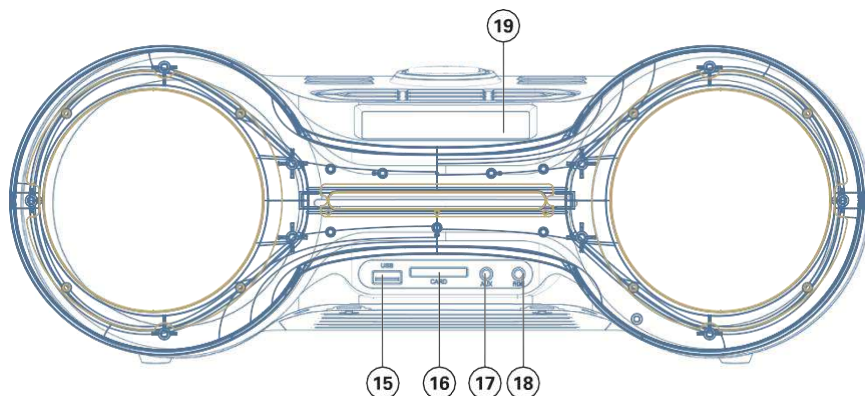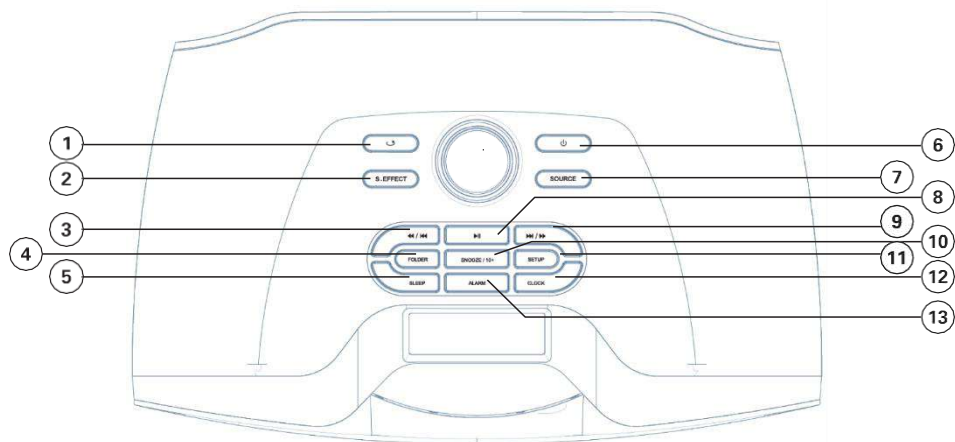



	Press once to repeat single track, press twice to repeat the entire album, press 3 times to shuffle playback.
	Press to switch to the equalizer mode.
	Press to return to previous track, hold to fast rewind playback.
	Press to temporarily pause playback. Press it again to resume the playback.
	Press to skip to next track, hold to fast forward playback.
	Press once to play from FOLDER 1, press twice to play from FOLDER 2, etc.
	Press once to skip to the 10th track, twice to skip to the 20th track, etc.

FM OPERATION

	Press to auto scan for radio channels, and to preset all available stations.
	Press to skip to previous station, hold to scan for available stations on a lower frequency.
	Press to skip to next station, hold to scan for available stations on a higher frequency.

BLUETOOTH OPERATION


	Press to pause playback. Press it again to resume playback · Hold to enter pairing mode.
	Press to return to previous track ·
	Press to skip to next track.

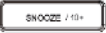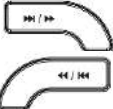  	Press to switch between clock, alarm 1 and alarm 2.
	Press to enter setup mode.
	Press to confirm settings. When the alarm goes off, press to enter snooze mode. (Alarm will go off again after 10 minutes)
	Press once to switch on alarm 1, press twice to switch on alarm 2, press 3 times to switch on both alarms, press 4 times to switch off all alarms.
	Press to adjust to the correct time. The volume knob can also be used to adjust to the correct time.
	Press once to enter sleep mode in 30 minutes. Press twice to enter sleep mode in 60 minutes. Press 3 times to enter sleep mode in 120 minutes. Press 4 times to switch off sleep mode.
	Press to stop the alarm when it goes off.

BLUETOOTH CONNECTION

The model of the unit is Soundblaster, press [SOURCE] button to switch to the corresponding signal source (Blue). Use your Bluetooth enabled mobile device to search for the Bluetooth signal of the unit, pair the unit to the device by selecting Soundblaster from the list of available devices in range. The unit will synchronize play songs on your Bluetooth enabled mobile device when connected successfully. Disconnect the Bluetooth connection by holding [PLAY / PAUSE] on the front panel.

 NOTE: In Bluetooth mode, [PLAY / PAUSE], [MUTE], [NEXT] and [PREVIOUS] buttons are also active.

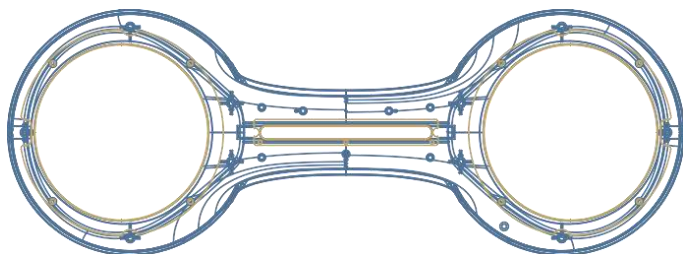

Bluetooth



Bluetooth Pairing
Name: Soundblaster

USB/ SD OPERATION

In the event of problems with the system and before taking it to an authorised service centre, please check the following:

Malfunction	Inspection and action
No power supply	• please check that the power cord is inserted into a working power socket. • please check that the system is turned on.
Failure	• press and hold the stand-by mode button for 5 seconds. The system will turn itself off. • If the system locks up, disconnect the power for 30 minutes. Reconnect the system to the power supply after 30 minutes. The system should be restarted.
Playback of USB/SD, no sound or hissing	• If different recording formats are on the SD or USB input, other than the recommended MP3/WMA format that this device uses, then the player might not be able to play them, or play them with a hissing quality. • Source file might be corrupt. Skip the track and try another.

SPECIFICATIONS

Category	Items	Description
Power	Working voltage	AC/DC adapter, 100~240V, 50/60Hz; DC 9V, 2A
	Consumption	20W
	Built-in battery	Li-ion 3.7V*2, 1800mAH
	Battery playback time	3 hours
	Battery charge time	3.5 hours
Audio	Output	8WX2 (4Ω, 1kHz 10%THD,RMS)
	Frequency response	20Hz~20KHz
	Signal to Noise Ratio	80dB
	AUX in sensitivity	800mV
Bluetooth	Version	BT 3.0+EDR
FM radio	Frequency range	87.5~108.0 MHz
USB reader	Audio formats	MP3. WMA
SD card	Audio formats	MP3. WMA

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product or packaging means that the product should not be treated as household waste. Do not throw garbage at the end of its life, but take it to a collection center for recycling. In this way you will help to protect the environment and be able to prevent any negative consequences that it would have on the environment and human health.

To find your nearest collection center:

- Contact local authorities
- Access the website: www.mmediu.ro

Request additional information from the store where you purchased the product.

