




SLIMSTYLESM 100S

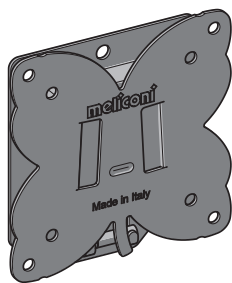


IT ISTRUZIONI DI MONTAGGIO
FR INSTRUCTIONS DE MONTAGE
EN MOUNTING INSTRUCTIONS
DE MONTAGEANLEITUNG
NL MONTAGEVOORSCHRIFT
ES GUÍA DE MONTAJE
PT INSTRUÇÕES DE MONTAGEM
PL INSTRUKCJA MONTAŻU
CZ NÁVOD K MONTÁŽI
RO INSTRUCȚIUNI DE MONTARE
HU SZERELÉSI ÚTMUTATÓ
FI ASENNUSOHJEET
SK NÁVOD NA MONTÁŽ
SL NAVODILA ZA MONTAŽO
MK ИНСТРУКЦИИ ЗА МОНТАЖА
SQ UDHËZIME PËR MONTIMIN















Qualità certificata
Certified quality

Meliconi S.p.A. - V. Minghetti, 10
40057 Cadriano di Granarolo E. (BO) Italy
www.meliconi.com e-mail: info@meliconi.com

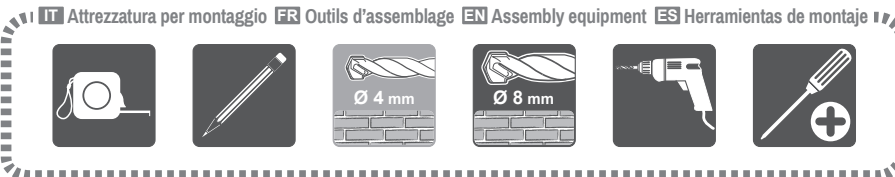

IT Dati tecnici FR Caractéristiques techniques EN Technical data ES Datos técnicos

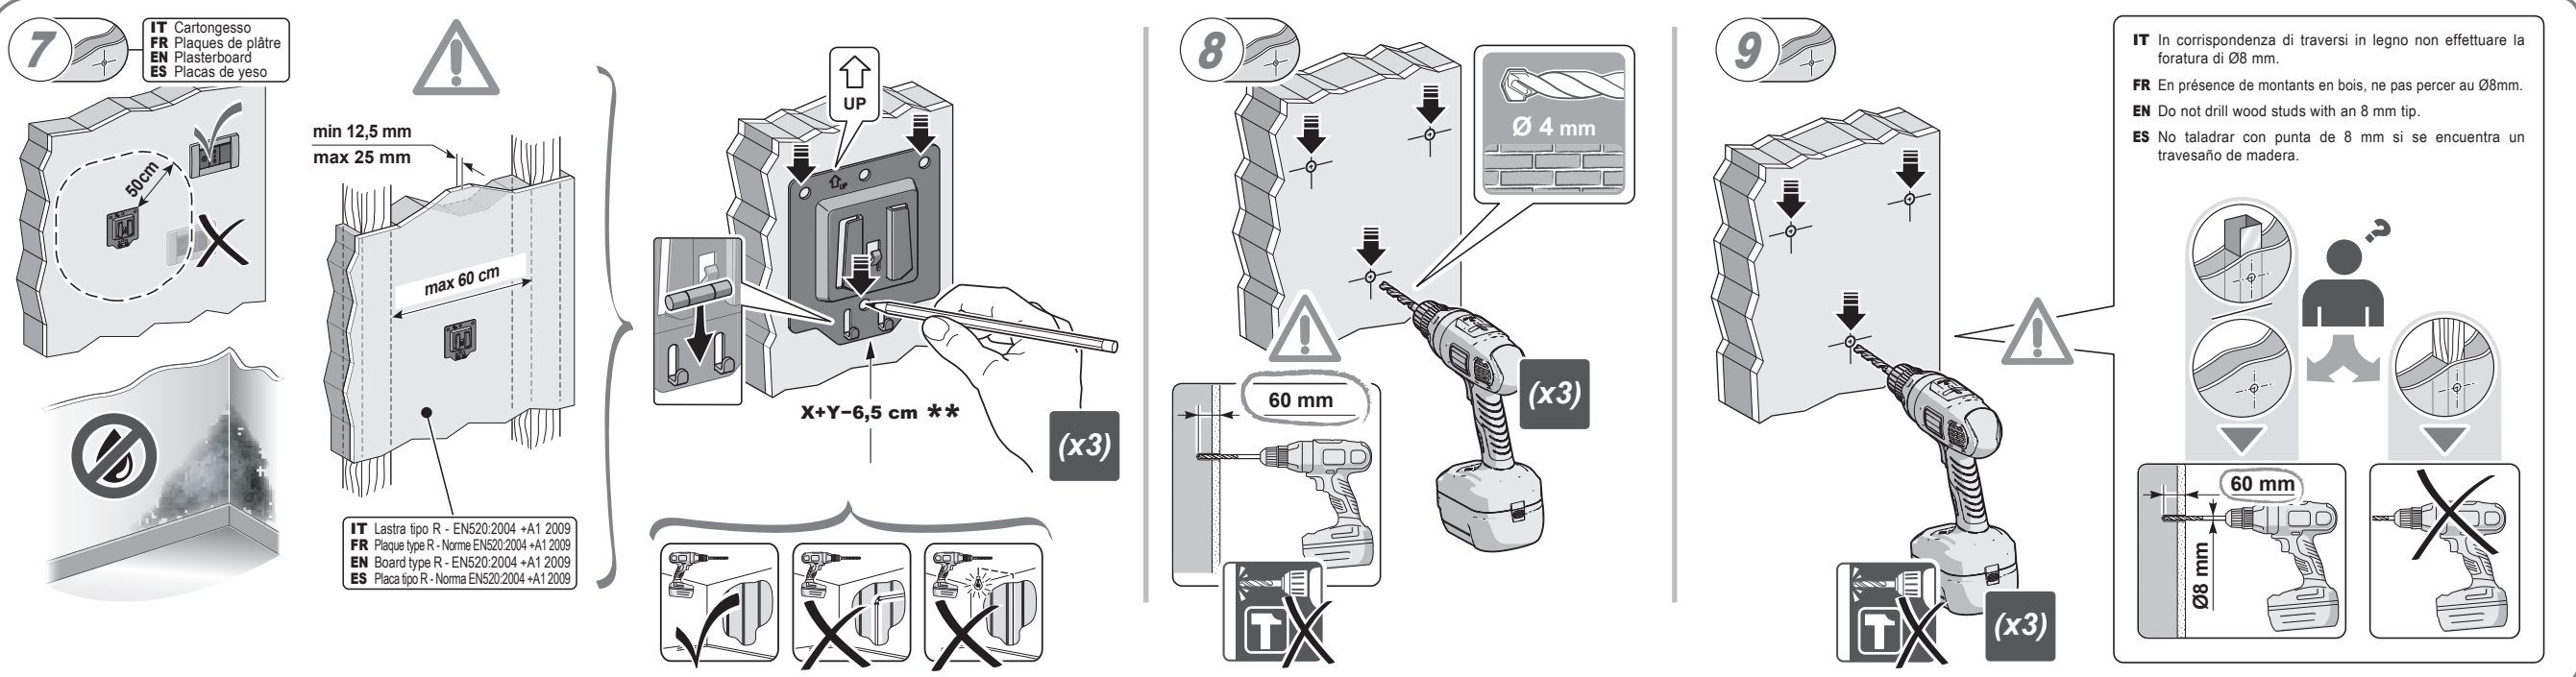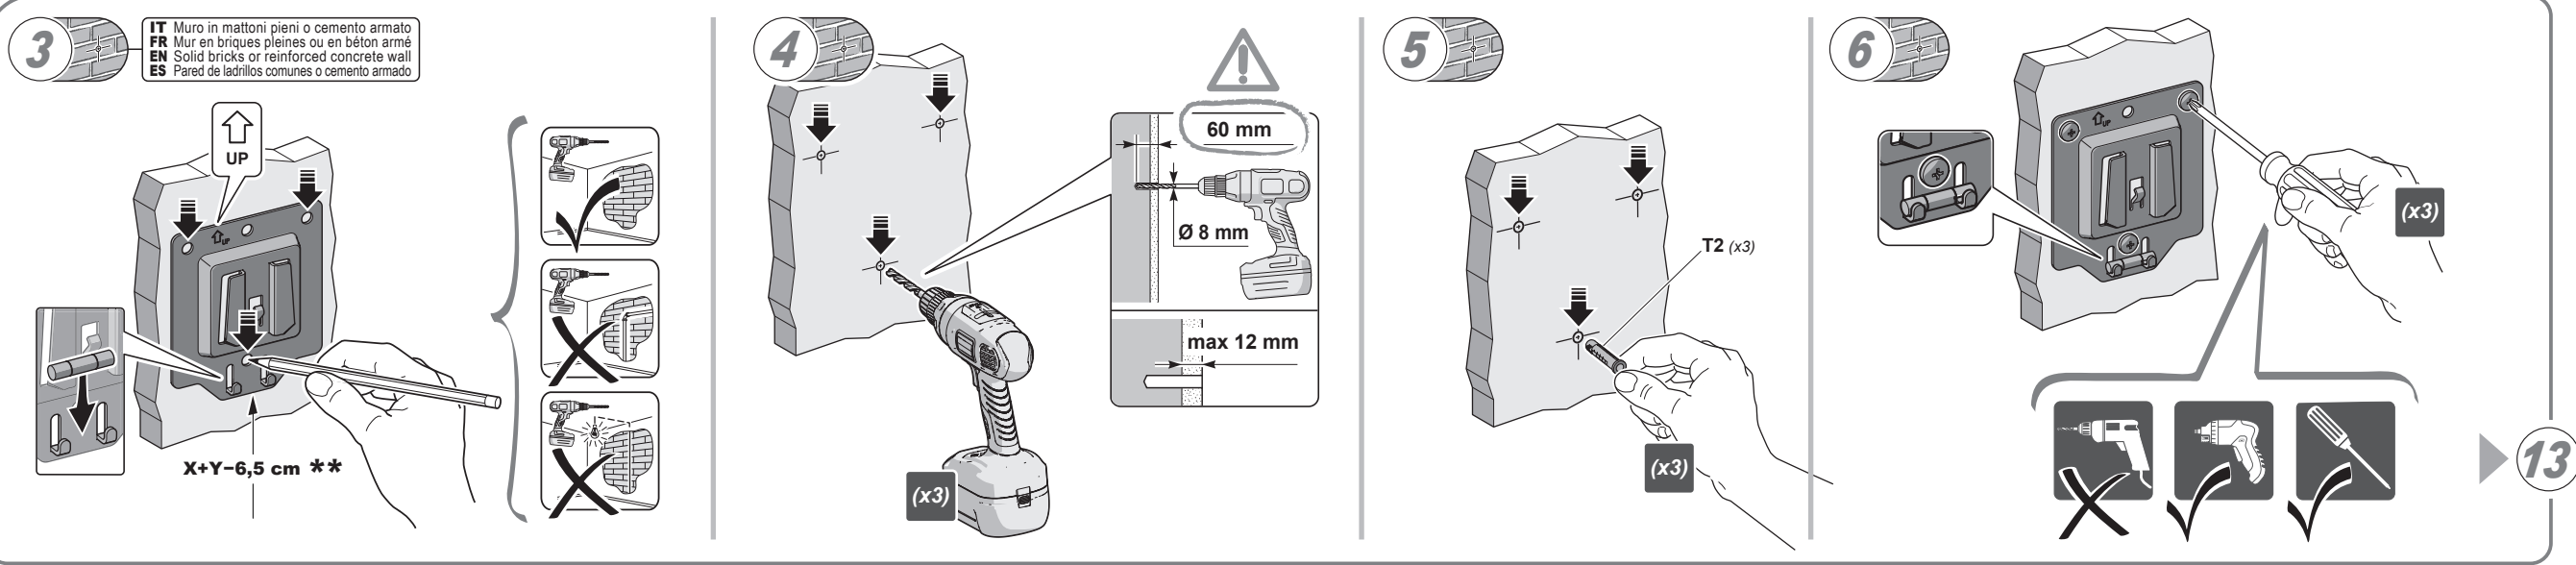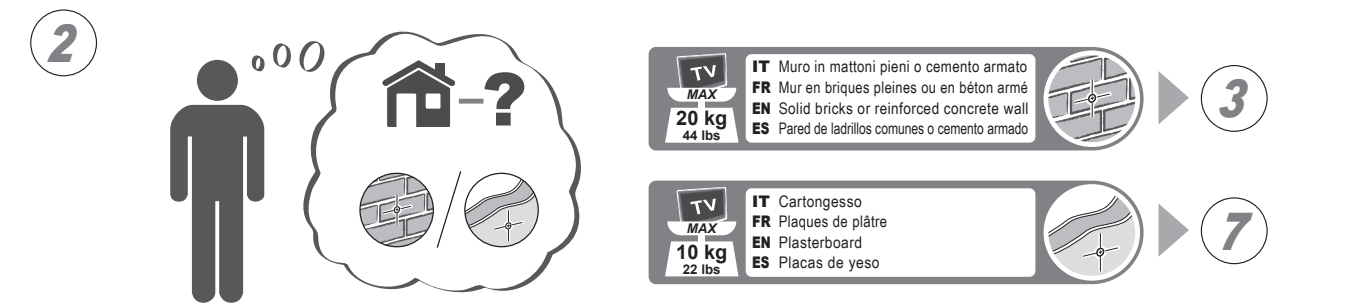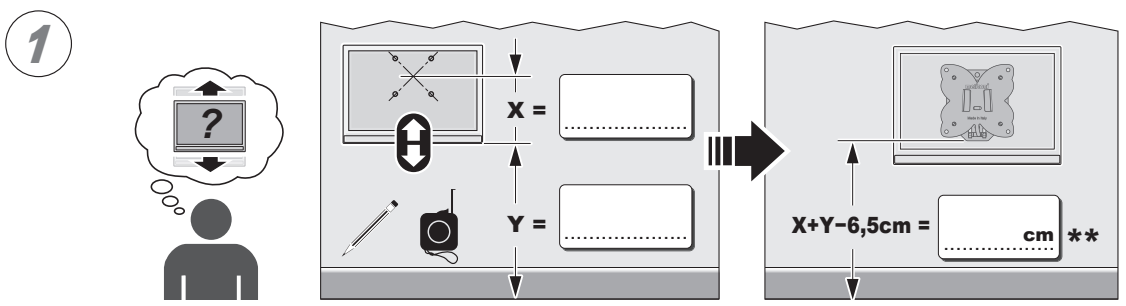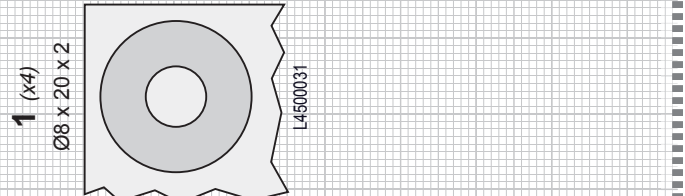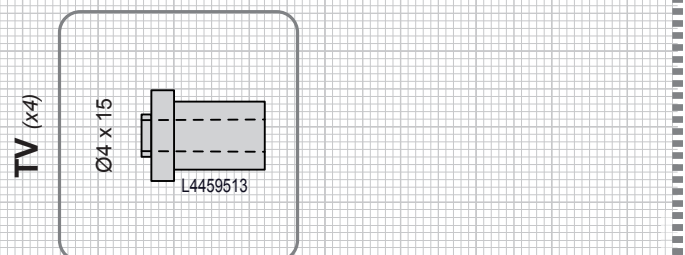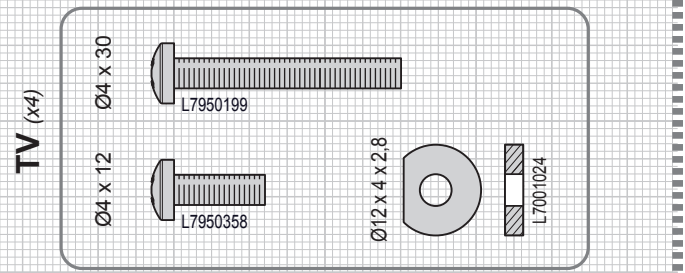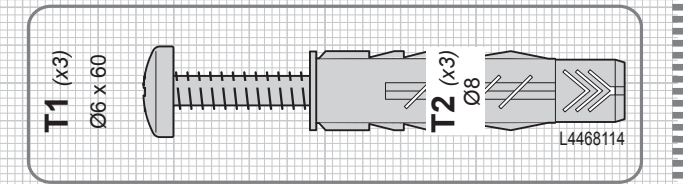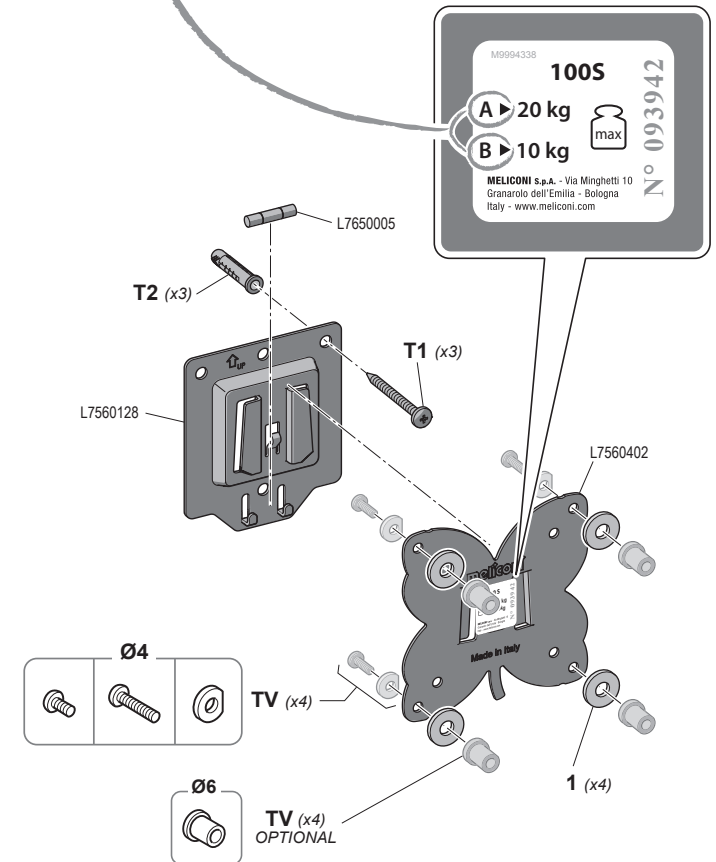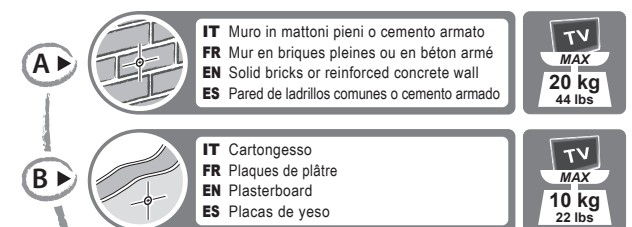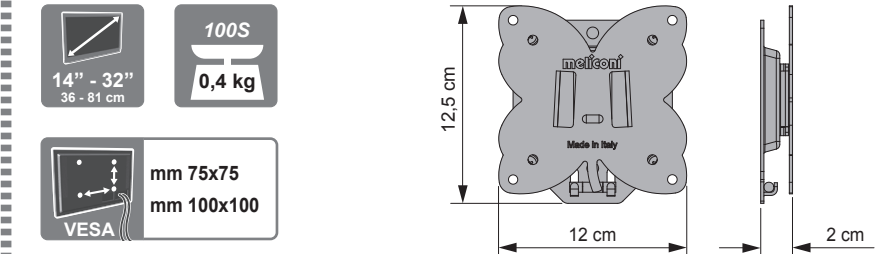

IT In corrispondenza di traversi in legno non effettuare la foratura di Ø8 mm.
FR En présence de montants en bois, ne pas percer au Ø8mm.
EN Do not drill wood studs with an 8 mm tip.
ES No taladrar con punta de 8 mm si se encuentra un travesaño de madera.

